


What you'll need: An aquarium (All Glass or Aqueon Brand), a phillips screwdriver, and 100% pure silicone (black looks best)

### Step 1:

Carefully unpack the new conversion kit. This will take at least 2 minutes because we pack our kits to withstand nuclear war.

*Be careful! Glass edges on the lower portion are sharp!*

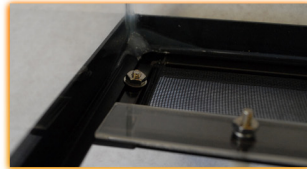

### Step 2:

With the kit removed from its ridiculous packaging, you can install the screen portion of your kit. To do this, simply unscrew and remove the upper right & left nuts & washers. Then place the screen portion into the top section of your aquarium. Tighten them \*hand tight\* for now over the frame to hold it in position while you work on step three.

### Step 3:

Silicone! Before installing the kit you must waterproof the upper (now lower) plastic rim of the aquarium. Add an even bead of silicone around the inside rim of the aquarium. Many All Glass/Aqueon brand aquariums are not perfectly sealed on the top portion. Don't skip this step!

Once you've waterproofed the inside, run a bead of silicone along the bottom and up 3" or so of the rim of your aquarium. (highlighted in orange) Push the glass portion of the kit into the fresh silicone and **center it as carefully as possible**. The glass **must sit centered** to be able to open and close properly without rubbing the sides of the aquarium.

Allow 48 hours to cure, then trim any excess silicone for a clean finished look using a razor blade.

**\*\* Water test the aquarium before proceeding \*\***



### Step 4:

Align the screen section as closely as possible and tighten the upper screws using a phillips screwdriver to keep the lid in place.

(Optional) Add the 2 clear plastic pieces (included) to keep door tightly shut under the twist locks. These pieces are easily removed in the future if you prefer a cleaner look.

Enjoy your new vertical terrarium!